

# Böttcherin Aquasol


## Wash for Water-Based Flexographic Printing Inks and Varnishes

### Flexographic Printing

It is suitable for both manual cleaning and for use in automatic washing systems for anilox rollers, ink pumps and chambered doctor blade systems.

### Sheet-fed Printing

Wash for manual cleaning in varnish units for anilox rollers and chambered doctor blade systems to remove water based varnish.

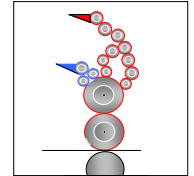

**Application**

- ⊕ water based alkaline cleaner
- ⊕ water miscible, free of aromatics, corrosion inhibited for aluminium
- ⊕ good dissolving performance for water-based flexographic printing inks and varnishes
- ⊕ economic in use
- ⊕ non foaming in washing systems
- ⊕ good chemical compatibility with flexo sleeves and flexo plates
- ⊕ also suitable for removing UV inks
- ⊕ compatibility with rollers for UV printing and dual purpose printing




**Features**

### Flexographic Printing

When manual cleaning, use Böttcherin Aquasol undiluted on a hand rag. Apply to the surface to be cleaned and then wipe off with a water-damped rag. In cases where dried-on flexographic printing ink is on anilox rollers, use Böttcherin Aquasol undiluted and rinse with water.

### Sheet-fed Printing

To clean the colour/varnish circulating system and chambered doctor blades, apply a solution of 1 part Böttcherin Aquasol with 20 parts water. Exposure time 5 to 10 minutes, wash down with fresh water. In cases where dried-on water-based varnish is on anilox rollers, use Böttcherin Aquasol undiluted and rinse with water. Wear protective gloves and approved personal eye protection during application, follow all press safety instructions.

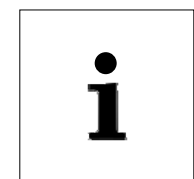


**Note**






PRINT SYSTEMS

- ⊕ 1 liter can
- ⊕ 20 liter can
- ⊕ 200 liter barrel
- ⊕ 1000 liter container

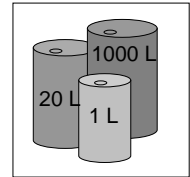

### Package

Böttcherin Aquasol is classified and marked in accordance with EC - Directive 1999/45/EC - in its latest version.

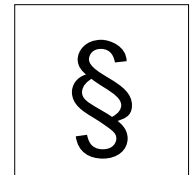

### Marking

All our product information's you will find in the internet on [www.boettcher-systems.com](http://www.boettcher-systems.com). On our homepage you will also experience why Felix Böttcher is one of the **leading system-suppliers of printing rollers, printing chemistry, printing blankets and coating plates.**

**Felix Böttcher GmbH & Co. KG - Germany**  
 Phone +49 221 4907 0  
 Fax +49 221 4907 435  
 koeln@boettcher-systems.com

**Argentina**  
 Phone +54 2322 46 62 00  
 Fax +54 2322 49 63 51  
 aschwald@boettcher-systems.com.ar

**Australia**  
 Phone +61 2 965 927 22  
 Fax +61 2 965 927 44  
 info@boettcher.com.au

**Austria**  
 Phone +43 223 686 070 1  
 Fax +43 223 686 070 150  
 office@boettcher.at

**Brazil**  
 Phone: +55 11 26 18 18 66  
 Fax: +55 11 26 18 18 66  
 fabio@boettcherdobrasil.com.br

**Canada**  
 Phone +1 905 612 07 38  
 Fax +1 905 612 81 27  
 bob.nixon@boettcher-systems.com

**Czech Republic**  
 Phone +420 517 326 511  
 Fax +420 517 341 718  
 boettcher@boettcher.cz

**France**  
 Phone +33 1 64 10 50 50  
 Fax +33 1 64 41 08 90  
 info@boettcher-france.com

**Great Britain - Ebbw Vale**  
 Phone +44 14 95 350 300  
 Fax +44 14 95 350 064  
 salesandservices@boettcher-systems.com

**Great Britain - Shipley**  
 Phone +44 12 74 530 531  
 Fax +44 12 74 530 532  
 salesandservices@boettcher-systems.com

**Hong Kong**  
 Phone +8 52 234 191 11  
 Fax +8 52 234 191 55  
 kammyli@263.net

**Hungary**  
 Phone +36 76 505 350  
 Fax +36 76 505 352  
 boettcher@boettcher.hu

**India**  
 Phone +91 127 424 52 89  
 Fax +91 127 424 52 90  
 info@boettcherindia.com

**Indonesia**  
 Phone +62 214 683 29 36  
 Fax +62 214 683 29 42  
 boettcher@cbn.net.id

**Italy**  
 Phone +39 02 484 171  
 Fax +39 02 484 173 42  
 boettcher-italy@boettcher-systems.com

**Japan**  
 Phone +81 33 64 76 401  
 Fax +81 33 64 76 411  
 tomiyama@boettcher.co.jp

**Lithuania**  
 Phone +370 422 50 538  
 Fax +370 422 50 538  
 boettcher@boettcher.lt

**Malaysia**  
 Phone +60 3 806 220 42  
 Fax +60 3 806 242 03  
 myoffice@boettcher.com.my

**Mexico**  
 Phone +52 55 565 77 293  
 Fax +52 55 565 79 419  
 enrique.iturbe@boettcher-systems.com

**Netherlands**  
 Phone +31 416 697 190  
 Fax +31 416 697 359  
 service@boettcher-systems.com

**People's Republic of China**  
 Phone +86 512 63 40 71 00  
 Fax +86 512 63 40 75 57  
 suzhou@boettcher.cn

**P. R. of China - Guangzhou**  
 Phone +86 20 37 58 55 09  
 Fax +86 20 37 58 50 76  
 gunagzhou@boettcher.cn

**Poland**  
 Phone +48 22 73 161 10  
 Fax +48 22 73 161 11  
 office.pl@boettcher-systems.com

**Russia**  
 Phone: +7 495 662 309 3  
 Fax: +7 495 662 309 4  
 moscow@boettcher-systems.com

**Singapore**  
 Phone +65 64 632 131  
 Fax +65 64 631 131  
 boettcher@singnet.com.sg

**Republic of Slovakia**  
 Phone +421 263 813 624  
 Fax +421 263 813 625  
 boettcher@boettcher.sk

**South Korea**  
 Phone +82 31 907 678 1  
 Fax +82 31 907 678 6  
 cjpark@boettcher.co.kr

**Spain**  
 Phone +34 91 88 59 577  
 Fax +34 91 88 59 268  
 central@boettcheriberica.com

**Sweden**  
 Phone +46 565 165 70  
 Fax +46 565 165 80  
 info@boettcher-miller.se

**Switzerland**  
 Phone +41 41 784 11 11  
 Fax +41 41 784 11 12  
 office.ch@boettcher-systems.com

**Taiwan R.O.C.**  
 Phone +886 2 822 868 48  
 Fax +886 2 822 868 49  
 barry.mao@boettcher.com.tw

**Thailand**  
 Phone +66 38 571 600  
 Fax +66 38 571 608  
 anurux.sasasmit@boettcher-systems.com

**Turkey**  
 Phone +90 2 126 599 338  
 Fax +90 2 126 599 340  
 ozan.karaca@boettcher-systems.com

**USA - Belcamp**  
 Phone +1 410 273 700 0  
 Fax +1 410 273 717 4  
 wayne.porter@boettcher-systems.com

**USA - Tipton**  
 Phone +1 765 675 444 9  
 Fax +1 765 675 411 1  
 jeff.hoover@boettcher-systems.com

The purpose of these technical data is to assist our customers. We list general experience and laboratory test. Translation of these to actual applications is, however, subject to a variety of factors which are beyond our control. We ask for your understanding that claims can't be based upon them.